

RXP 101: Air-volume adding relay

How energy efficiency is improved

For the reliable and demand-led control of air in laboratories.

Areas of application

Synchronisation of room air in laboratories, can also be used in Zone 1 potentially explosive areas.

Features

- Maximum of 4 inputs for actual values
- Easy adjustment of exact partial air volumes using adjusters
- ATEX certification for use in Zone 1 potentially explosive areas
- Conformity tested as per EN 13463-1 and EN 1127-1 (Ex II 2 G T6)
- Compressed-air connections with Rp 1/8" female thread



T03099



Y03186

Technical description

- Supply pressure 1.3 bar \pm 0.1
- Four inputs for:
 - room return air
- One output for:
 - command variable signal for supply-air controller
- Setpoint adjuster for weighting partial volumes and setpoint adjustment ΔV

| Type | Function | Air capacity | Air consumption ¹⁾ | Weight kg |
|-------------------------------|---------------------------|-----------------------|-------------------------------|---------------------------|
| RXP 101 F001 | addition of 4 air volumes | 400 l _n /h | 40 l _n /h | 0,7 |
| Supply pressure ²⁾ | 1.3 bar \pm 0,1 | | Permissible amb. temp. | 0...55 °C |
| Input pressures | 0,2...1,0 bar | | | |
| Output pressure | 0,2...1,0 bar | | Connection diagram | A03187 |
| Setpoint shift ΔV | 3...20% \dot{V} | | Dimension drawing | M297100 |
| Control action | A | | Fitting instructions | MV 505207 |

1) Without transducer; air consumption for transducer connections 3, 4, 5 and 6 is 33 l_n/h each

2) See Section 60 on regulations concerning the quality of supply air, especially at low ambient temperatures

Operation

Using the adjustment knobs (x3, x4, x5 and x6), the pressure at each of the connections 3, 4, 5 and 6 (e.g. output pressure of an RLP controller) is weighted and then added together with the others. Each of the partial air volumes can, therefore, be multiplied by a certain factor (percentage share of the total volume flow) and then, in the addition unit, be united in correct proportion to the total volume flow.

Using the ΔV adjuster (for setpoint shift), the room supply-air rate can be reduced with respect to the room exhaust-air rate, thereby affecting the under-pressure in the room. If more than four air volumes have to be converged, then a second unit can be connected. If less than four volume flows are cumulated, then the spare connections should not be closed off.

По вопросам продаж и поддержки обращайтесь:

Волгоград +7 (8442) 45-94-42
Екатеринбург +7 (343) 302-14-75
Ижевск +7 (3412) 20-90-75
Казань +7 (843) 207-19-05

Краснодар +7 (861) 238-86-59
Красноярск +7 (391) 989-82-67
Москва +7 (499) 404-24-72
Ниж.Новгород +7 (831) 200-34-65

Новосибирск +7 (383) 235-95-48
Омск +7 (381) 299-16-70
Пермь +7 (342) 233-81-65
Ростов-на-Дону +7 (863) 309-14-65

Самара +7 (846) 219-28-25
Санкт-Петербург +7 (812) 660-57-09
Саратов +7 (845) 239-86-35
Сочи +7 (862) 279-22-65


Software

A calculation program is available for working out the values to be entered on the adding unit.

Dimension drawing

Example of use

Volume of return air controlled in proportion to the opening of the fume cupboard's sliding door; with sash sensor, alarm and operating unit and adding relay.

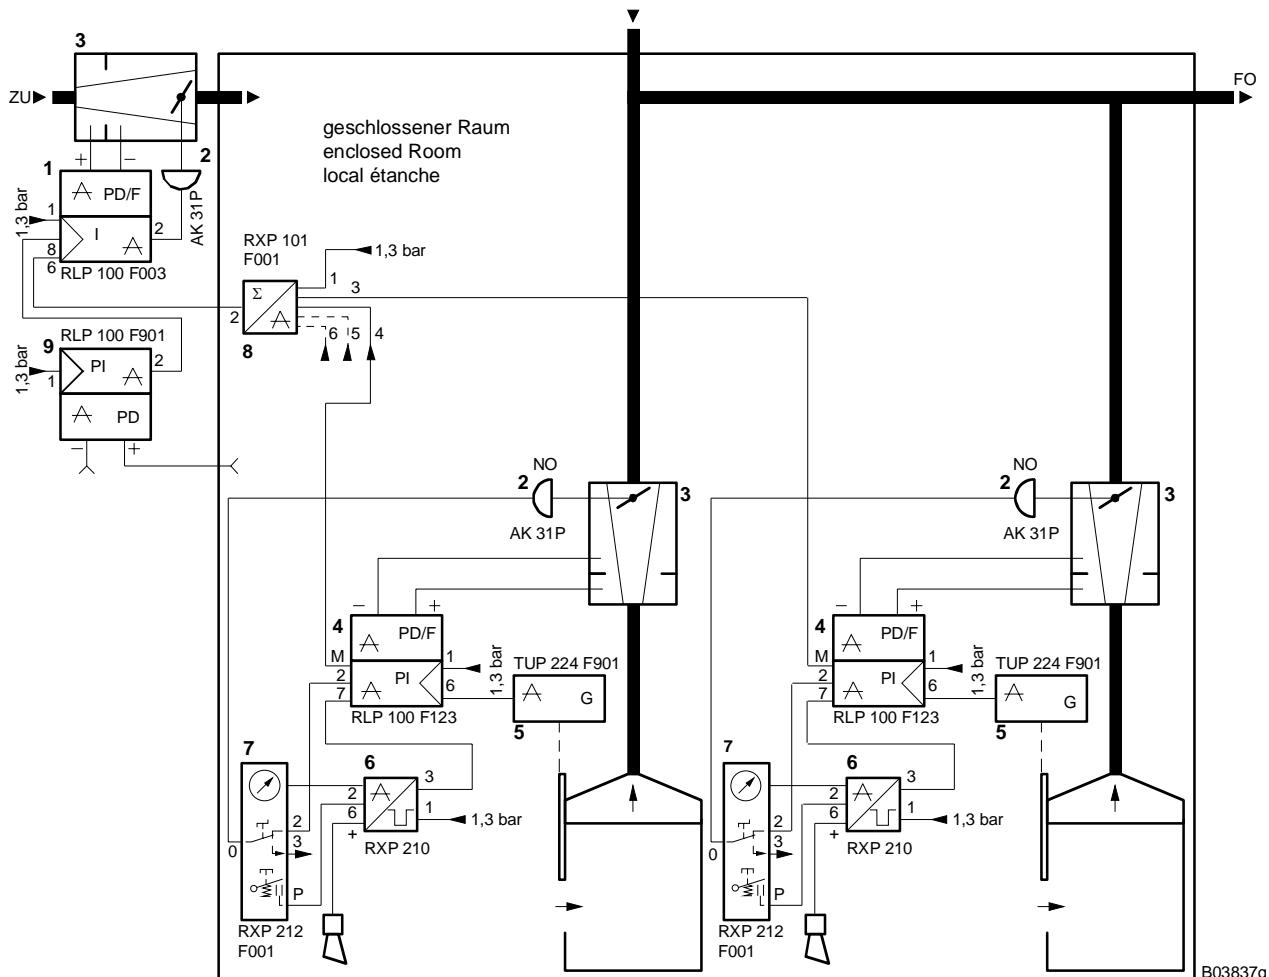

| | | | |
|---|--|--------------------|-------------------------|
| 1 | Volume-flow controller | 7 | Operating unit |
| 2 | Damper drive NO | 8 | Air-volume adding relay |
| 3 | Reducing box | 9 | Pressure controller |
| 4 | VAV return-air controller for fume cupboards | FO | EA (exhaust air) |
| 5 | Path-measuring transmitter | ZU | SA (supply air) |
| 6 | Alarm unit | NO = normally open | |

По вопросам продаж и поддержки обращайтесь:

Волгоград +7 (8442) 45-94-42
Екатеринбург +7 (343) 302-14-75
Ижевск +7 (3412) 20-90-75
Казань +7 (843) 207-19-05

Краснодар +7 (861) 238-86-59
Красноярск +7 (391) 989-82-67
Москва +7 (499) 404-24-72
Ниж.Новгород +7 (831) 200-34-65

Новосибирск +7 (383) 235-95-48
Омск +7 (381) 299-16-70
Пермь +7 (342) 233-81-65
Ростов-на-Дону +7 (863) 309-14-65

Самара +7 (846) 219-28-25
Санкт-Петербург +7 (812) 660-57-09
Саратов +7 (845) 239-86-35
Сочи +7 (862) 279-22-65