

RWP: Reversing relay Areas of application

Reversing the direction of operation of a pneumatic signal in pneumatic control systems.

Features

- Reversing signal direction
- Minimum and/or maximum limiting of pneumatic pressure signals
- Controller front panel is printed with circuit diagram for rapid identification of function
- Reversible control action
- Thermoplastic housing suitable for wall or top-hat rail mounting
- Compressed air connections with Rp 1/8" female thread
- Complies with directive 97/23/EC Art. 3.3 on pressure equipment



T03076



Y07576

Technical description

- Supply pressure 1.3 bar \pm 0.1
- Two input signals for:
 - minimum limiting
 - maximum limiting
- One output signal **Type**

	Description	Air output 400 l _n /h	Air consumption 33 l _n /h	Weight kg
RWP 80 F001	reversal of control action			0,15
Supply pressure ¹⁾	1,3 bar \pm 0,1	Permissible amb. temp.		0...55 °C
Input pressure	0...1,4 bar	Connection diagram		A02891
Output pressure	0...1,4 bar	Dimension drawing		M297107
		Fitting instructions		MV 3251

Accessories

- 0296936 000*** Fixing bracket for rail EN 60715, 35 × 7,5 and 35 × 15
- 0297113 000*** Manometer bracket for fitting two XMP manometers; includes kit; MV 3255
- 0297091 000*** Cover for spare apertures (for manometers), when 0297113 is used


^{*)} Dimension drawing or wiring diagram are available under the same number

¹⁾ See Section 60 on regulations concerning the quality of supply air, especially at low ambient temperatures

Operation


When the input pressure is rising, the output pressure falls; conversely, falling input pressure produces rising output pressure. Variable pressures can also be applied to connections 1 and 6; this provides limitation of the output pressure.

Connection 1 is for maximum limitation (0,8 to 1,4 bar) and/or connection 6 is for minimum limitation (0 to 1,4 bar). The output pressure is then prevented from ever exceeding the pressure at connection 1, and will never be lower than the pressure at connection 6.

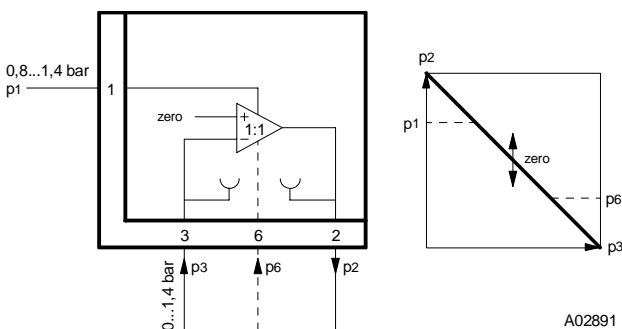Connection diagram


A02891

Dimension drawing

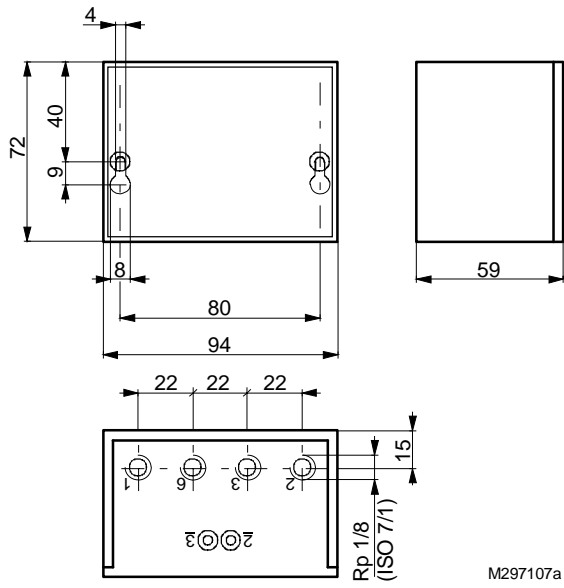


Accessories


296936

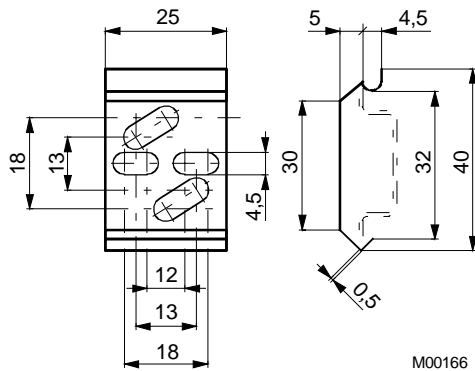

297091

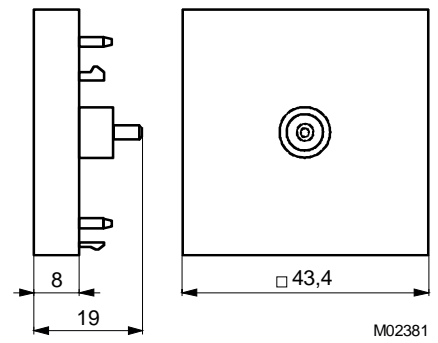

297113

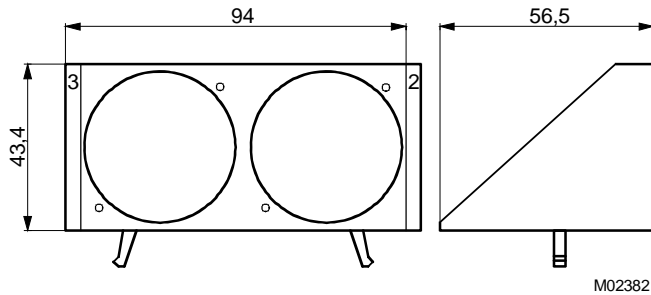

По вопросам продаж и поддержки обращайтесь:

Архангельск +7 (8182) 45-71-35	Калининград +7 (4012) 72-21-36	Новороссийск +7 (8617) 30-82-64	Сочи +7 (862) 279-22-65
Астана +7 (7172) 69-68-15	Калуга +7 (4842) 33-35-03	Новосибирск +7 (383) 235-95-48	Ставрополь +7 (8652) 57-76-63
Астрахань +7 (8512) 99-46-80	Кемерово +7 (3842) 21-56-70	Омск +7 (381) 299-16-70	Сургут +7 (3462) 77-96-35
Барнаул +7 (3852) 37-96-76	Киров +7 (8332) 20-58-70	Орел +7 (4862) 22-23-86	Сызрань +7 (8464) 33-50-64
Белгород +7 (4722) 20-58-80	Краснодар +7 (861) 238-86-59	Оренбург +7 (3532) 48-64-35	Сыктывкар +7 (8212) 28-83-02
Брянск +7 (4832) 32-17-25	Красноярск +7 (391) 989-82-67	Пенза +7 (8412) 23-52-98	Тверь +7 (4822) 39-50-56
Владивосток +7 (4232) 49-26-85	Курск +7 (4712) 23-80-45	Первоуральск +7 (3439) 26-01-18	Томск +7 (3822) 48-95-05
Владимир +7 (4922) 49-51-33	Липецк +7 (4742) 20-01-75	Пермь +7 (342) 233-81-65	Тула +7 (4872) 44-05-30
Волгоград +7 (8442) 45-94-42	Магнитогорск +7 (3519) 51-02-81	Ростов-на-Дону +7 (863) 309-14-65	Тюмень +7 (3452) 56-94-75
Воронеж +7 (4732) 12-26-70	Москва +7 (499) 404-24-72	Рязань +7 (4912) 77-61-95	Ульяновск +7 (8422) 42-51-95
Екатеринбург +7 (343) 302-14-75	Мурманск +7 (8152) 65-52-70	Самара +7 (846) 219-28-25	Уфа +7 (347) 258-82-65
Иваново +7 (4932) 70-02-95	Наб.Челны +7 (8552) 91-01-32	Санкт-Петербург +7 (812) 660-57-09	Хабаровск +7 (421) 292-95-69
Ижевск +7 (3412) 20-90-75	Ниж.Новгород +7 (831) 200-34-65	Саранск +7 (8342) 22-95-16	Чебоксары +7 (8352) 28-50-89
Иркутск +7 (3952) 56-24-09	Нижевартовск +7 (3466) 48-22-23	Саратов +7 (845) 239-86-35	Челябинск +7 (351) 277-89-65
Йошкар-Ола +7 (8362) 38-66-61	Нижекамск +7 (8555) 24-47-85	Смоленск +7 (4812) 51-55-32	Череповец +7 (8202) 49-07-18
Казань +7 (843) 207-19-05			Ярославль +7 (4852) 67-02-35

**сайт: sauter.pro-solution.ru | эл. почта: sxr@pro-solution.ru
телефон: 8 800 511 88 70**